



Oil Pressure Gauge

**Please note that all information contained is for guidance
proceed at your own risk.
You will be responsible for any damage or losses caused.**

Oil Pressure Gauge

Equipment needed

1. Regulated air source (0 to 80 psi), with accurate gauge
2. Connector for the rear of the gauge
3. Pipe to connect the gauge to the air source

Once the air source is connected to the gauge adjust the pressure, from 0 to 80 psi and the oil pressure gauge should read approx. as shown below.

